Unisenza



WiFi Programmable Thermostat



Wifi Connection










1	2	3	4	5 blinking
-	D - 0	DA PO IE	one tap	PA PO PA


Programming

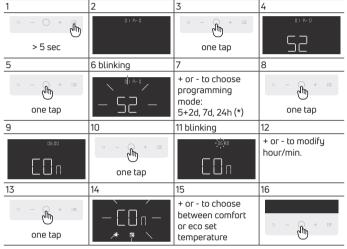

Repeat step from 9 to 16 to change settings for different interval

(GetUp, GoAway, GoHome, Sleep) and for different days.
(*) 5+2d (all working day and weekend have different program) - 7d (every day have different programs) - 24h (every day have the same programs).

Setting Time & Date

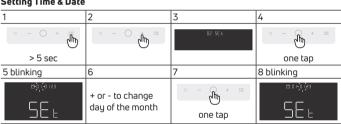

Repeat step from 5 to 7 for month, year, hour, min.

Change Set temperatures in Comfort, Eco and manual mode							
1	2	3	4 blinking				
one tap	or	or					

Temporary Boost Mode (Till next programmed time)



Boost Mode (With defined time)						
1	2	3	4 blinking			
one tap	H	ot 	↓			
5	6	7 blinking	8			
one tap	ot	_ 26.5 <u>_</u>	one tap			

Wiring

