Unisenza Plus



Electronic Thermostatic Head

Pack contents



- a. Electronic Thermostatic Head
- b. 2 x AA-sized Alkaline Batteries
- c. RA adaptor

Overview



- 1. Display LCD 2. Button

 - 3. Button
 - Button
 - 5. Battery compartment
 - 6. Securing ring

Disp	lay	ICC	ons

Icon	Meaning	Description
(4)	Antenna	On: the device is joined to a Unisenza Plus Network
		Flashing: the device is searching for a Unisenza Plus Network
(0)	Pairing status	On: the device pairs with a room thermostat or a receiver
		Flashing: the device is in a pairing process
	Heating On	On: the device demands for Heat and the valve is opened by the Electronic
<i>}}}</i>		Thermostatic Head actuator
		Flashing: the actuator motor is moving to adjust the valve opening
U U	Schedule mode	Schedule mode is running
	Scriedate mode	Schedule mode is running
*	Off mode	Device is in Off mode, frost protection will be running.
	0.11.11000	Device is in on mose, most protection mix be remaining.
	Battery icon	Shows the battery level
88.8	Digits	Showing set point * or other information
	-	
0,	Key lock	Key is locked
A	Alert	It is shown with an error code tell what system fault
°C	T	Towns and the College of Fall and the
°C °F	Temperature unit	Temperature unit in Celsius or Fahrenheit

Installation







Installing the	
ion I valve	

























P2










PDF rôl





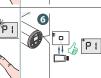

Valve adaptation	
---------------------	--

operation mode

Press 🔘 to change
one of the following
operation mode.
During mode change
the LCD displays and
flashes the mode

indication.

	Icon	Mode	Explanation	
	U-U	Schedule mode	The device operates according to the schedule defined in the App.	
	*	Off mode	The device is turned Off with frost protection active.	
	ļη	Manual mode	The device operates according to the manual input of set point	